


EMERGENCY EQUIPMENT

INV-BOX-CBY-303426-SLVR

INSTALLATION INSTRUCTIONS

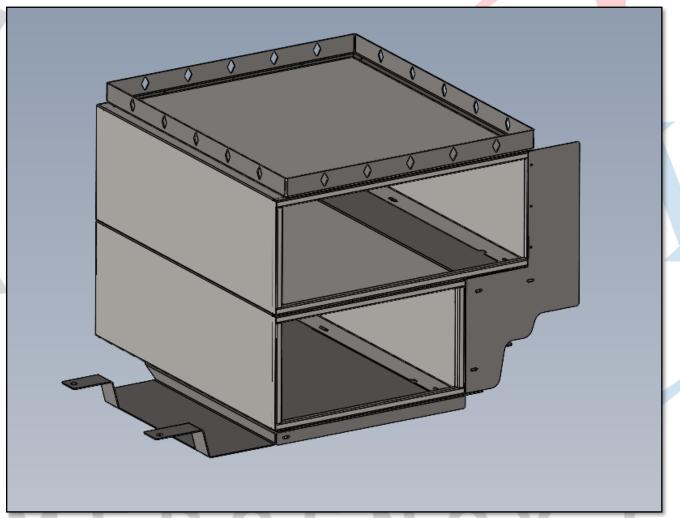

INCLUDED FOR INSTALL:


CUBBY UNITS

MOUNTING FOOT – REAR

MOUNTING FOOT – FRONT


¼-20 NUTSERTS, 4 EA. ¼-20 X ½" BHCS & WASHERS, 4 EA. 10-32 X ½" BHCS & WASHERS, 4 EA.


RGENCYEQUIPMENT

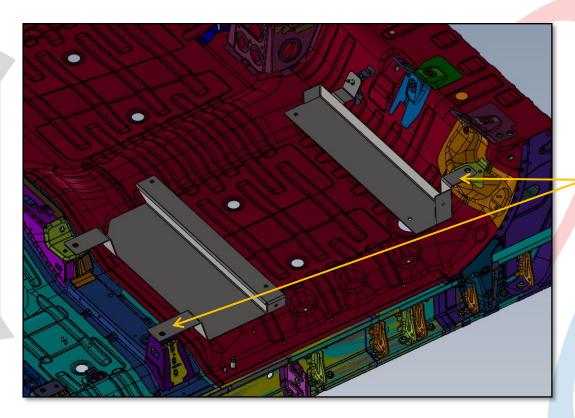

PLACE LOWER SHELF SKIN ON MOUNTING BRACKETS, ALIGN WITH HOLES ON BRACKETS, PLACE LIP FLUSH WITH OUTSIDE OF BRACKET REMOVE REAR SEAT, LIFT FRONT SEAT FROM REAR MOUNTING POINTS.
SET HARDWARE ASIDE FOR RE-USE.


ATTACH FRONT AND REAR MOUNTING BRACKETS AS SHOWN USING FACTORY HARDWARE

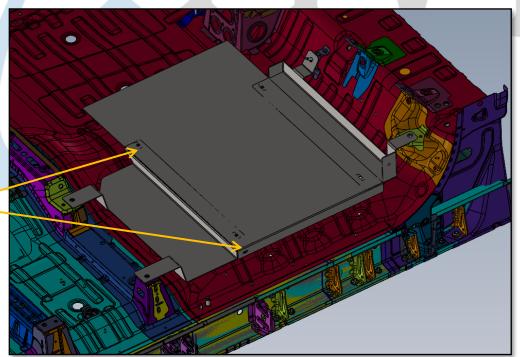


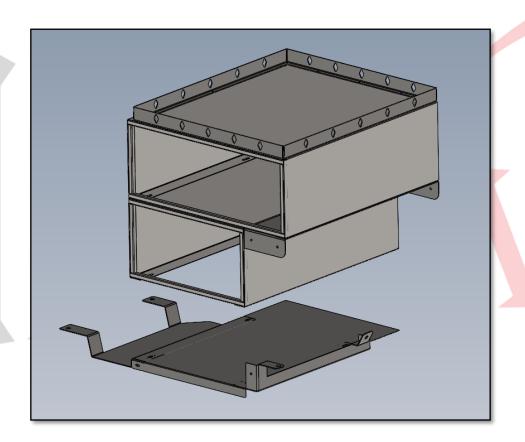

MOUNT CUBBIES ON BRACKETS AND SECURE WITH PROVIDED HARDWARE, ADJUST BOTTOM SKIN INTO POSITION AND TIGHTEN MOUNTING HARDWARE.

ATTACH TRIM PANEL TO HOLES IN MOUNTING BRACKETS, AND TO FRAME WITH SELF-TAPPING SCREWS.

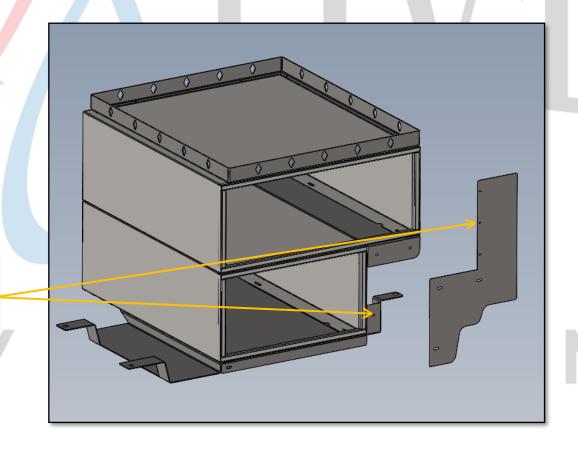

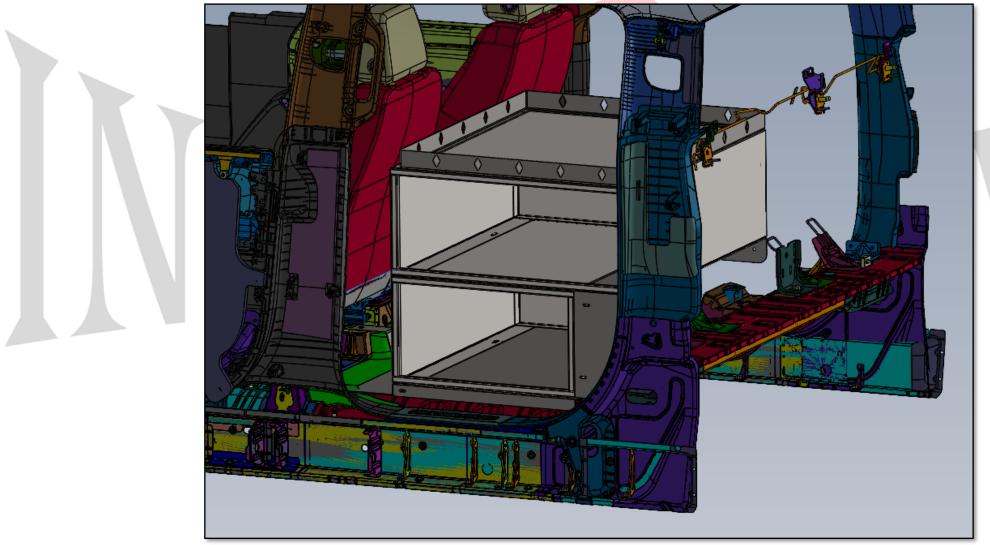

ERGE INSTALLATION IS COMPLETE



1616 MARLBOROUGH AVE. RIVERSIDE, CA 92507

FOR TECHNICAL ASSISTANCE WITH INSTALLATION OR OTHER QUESTIONS, PLEASE CALL (951) 222-2270

OR EMAIL SUPPORT@IDSMP.COM

Thank you for your business!